
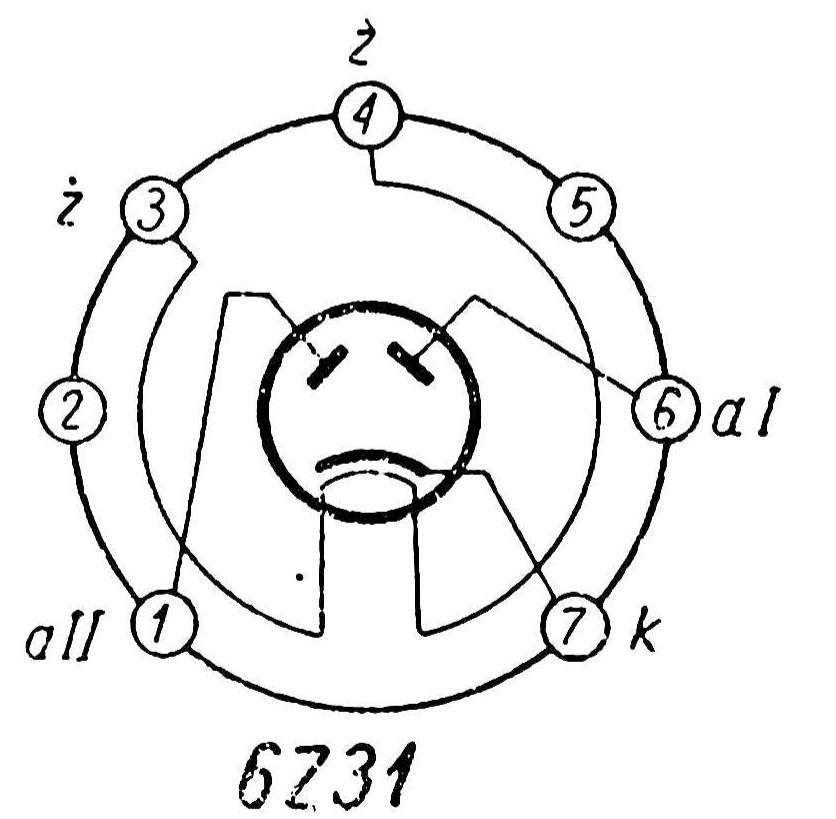
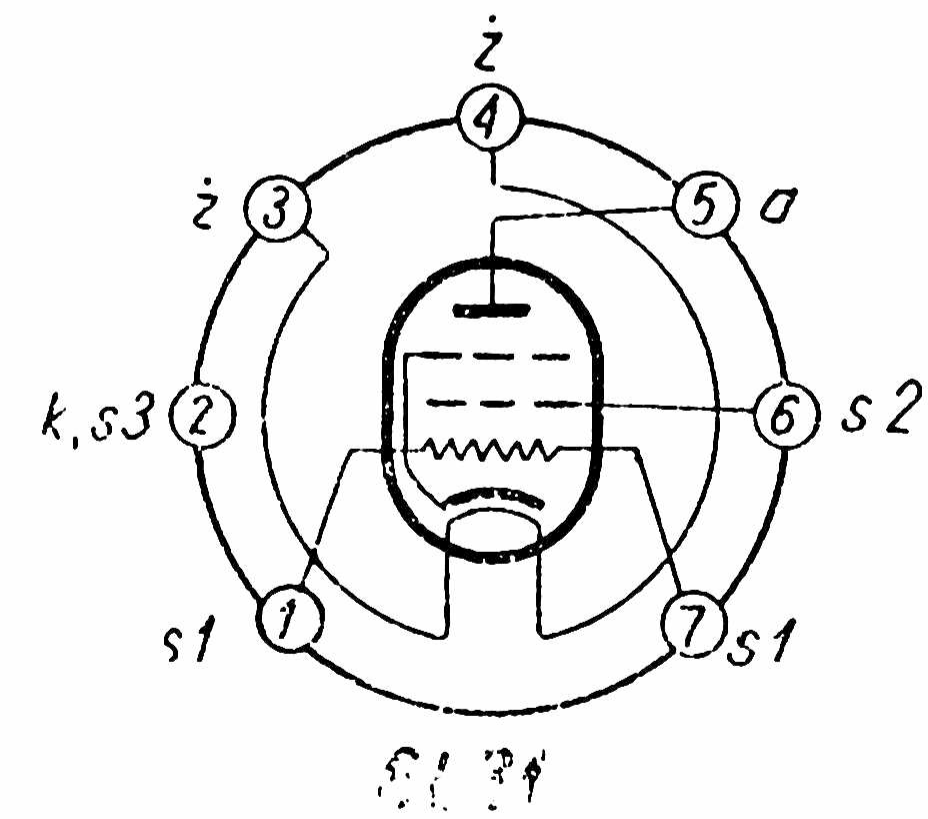
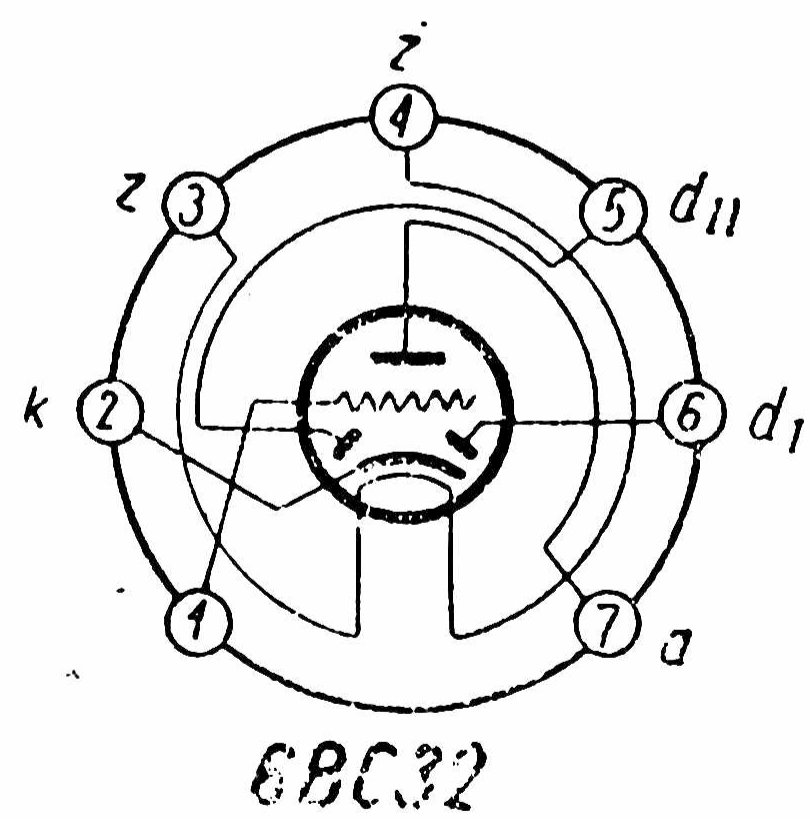
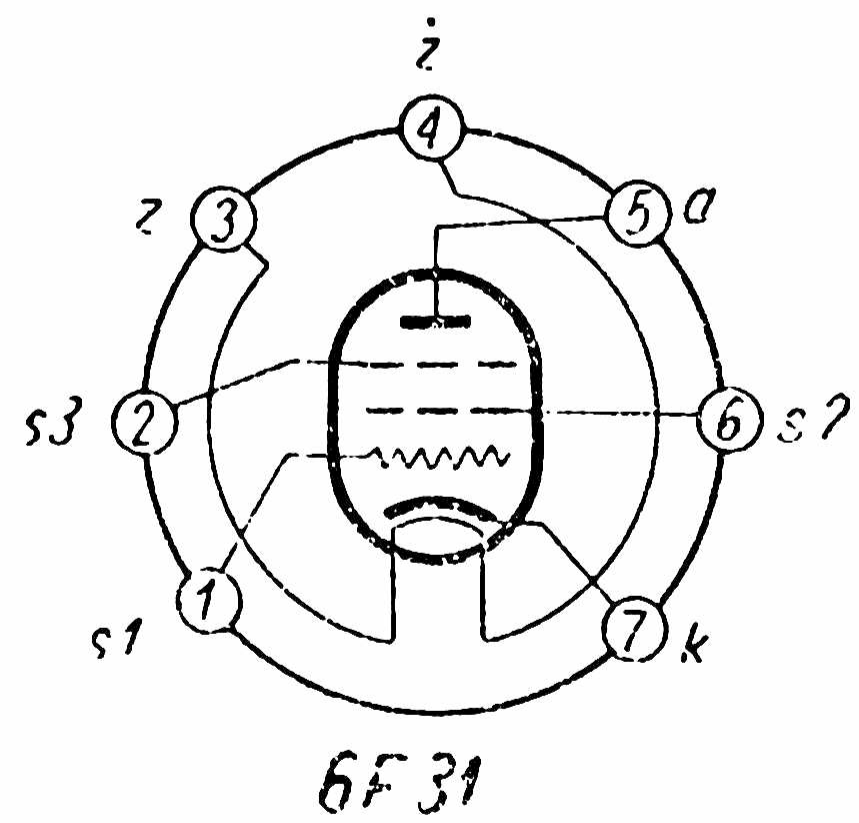
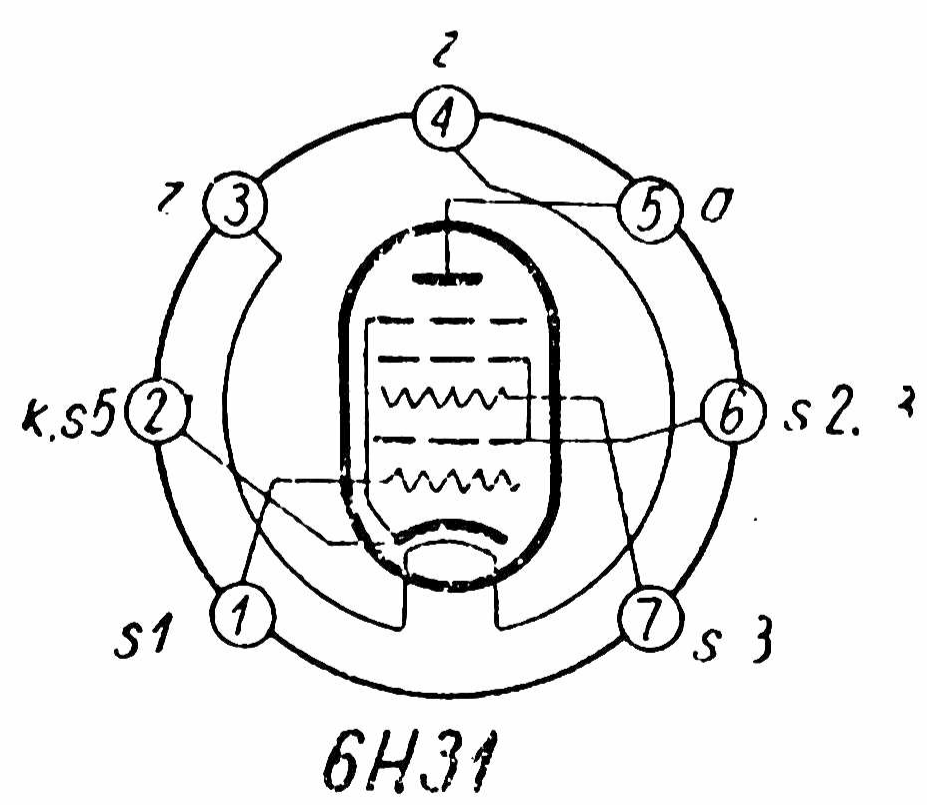


Położenia przelazcznika zakresów fal

	1-2	3-4	5-6	7-8	9-8	11-12	16-18	13-14	19-14	14-16	14-22	22-24	18-24	12-24
KR	•		•			•		•		•				•
SR		•		•			•		•		•		•	
DŁ					•							•		

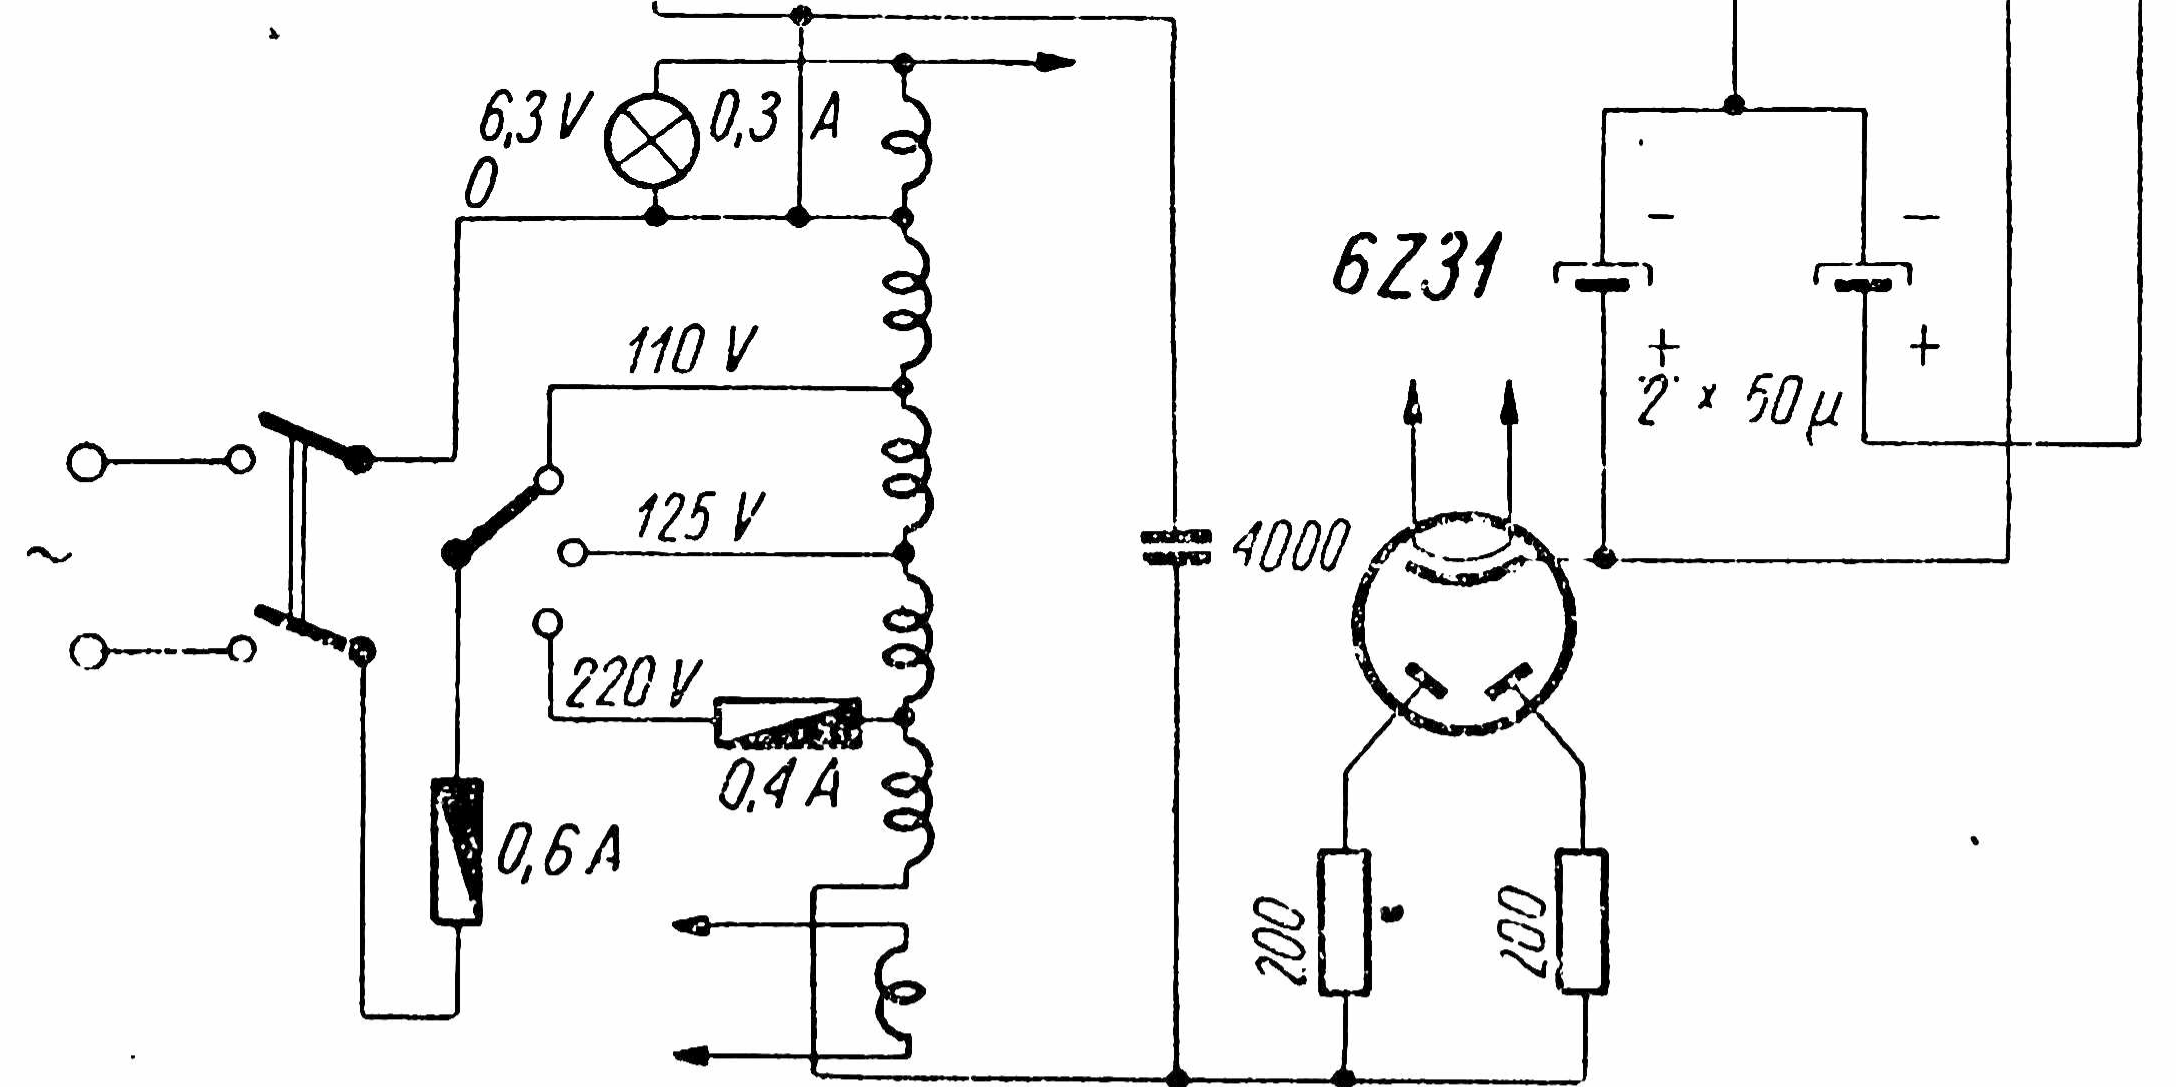

Schemat ideowy odbiornika radiowego „Tesla“ 420 A